



To allow for sag and wind uplift of ceiling and or floor. Do not fix deflection head track to Steel Stud or to wall lining when used Slab to Slab. Unless engineered design instructs otherwise.

SRP recommends that Nog track is installed just down from head track to keep the studs inline, ease of installation and wall stiffness.

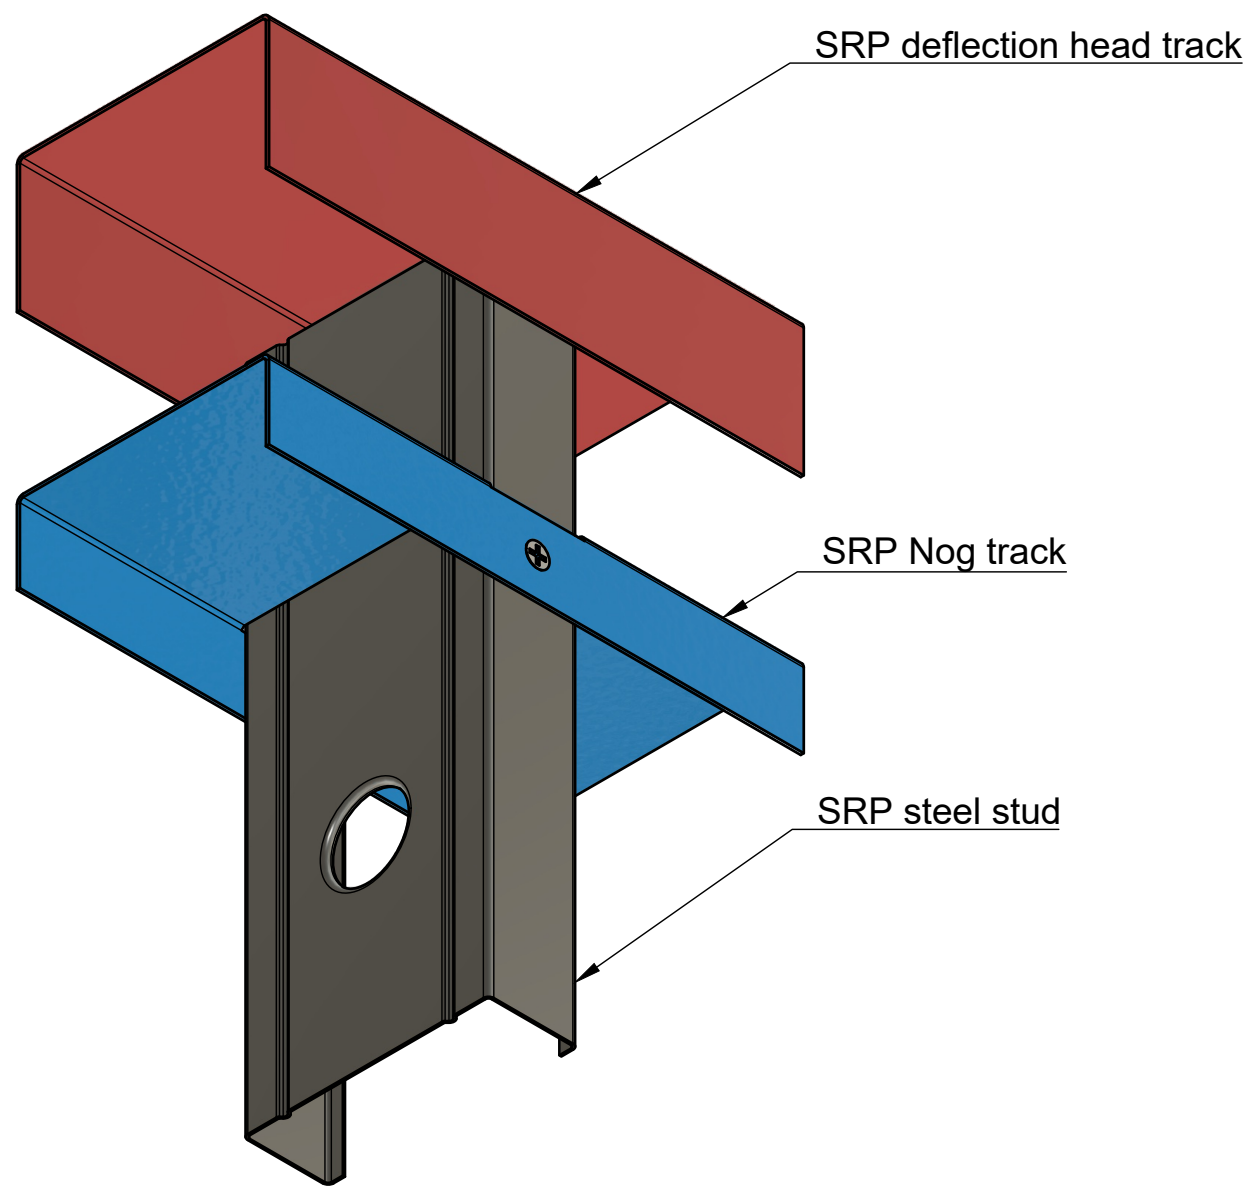

Dept.	Technical reference	Created by jack w	20/08/2024	Approved by MB
 Admin@srpltd.co.nz 0800579017		Document type	Document status	
		Title Deflection head track standard detail	DWG No.	
			Rev.	Date of issue